


Getting Started Guide

AWR Advantage

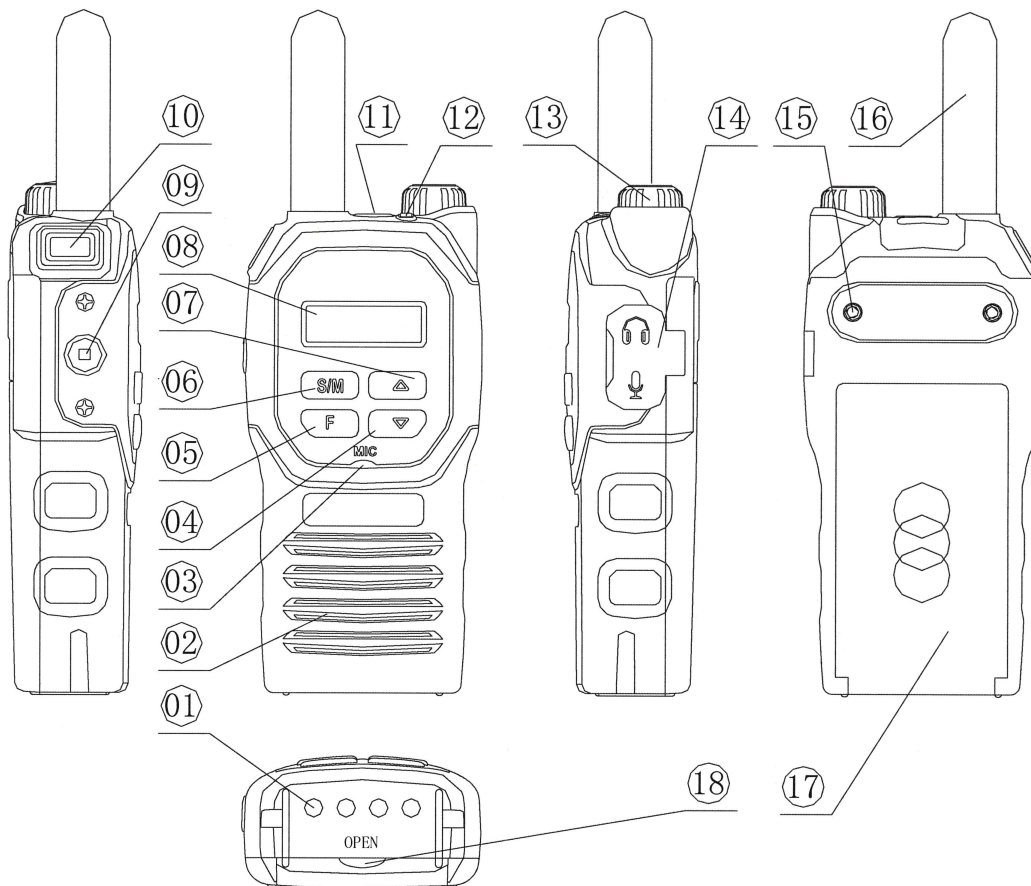

1. **Charger Terminal**
2. **Speaker**
3. **Microphone**
4. **▼, Channel Down Key**
- Select item key in Local setting Mode
5. **F, Programmable function key** - Default: Key Lock @long press, Flashlight @short press, Exit current status key in local setting mode
6. **S/M, Programmable function key** - Default: Menu @long press, Scan @short press
7. **▲, Channel Up Key** - Select item key in Local programming Mode
8. **LCD display** - refer to the below symbols list.
9. **SF2, Programmable function key** - Default: Channel view @short press, Monitor @long press
10. **SF1, Programmable function key** - default: PTT
11. **LED Flashlight**
12. **LED Indicator (Tx & Busy)**
13. **Power switch/ Volume Knob**
14. **Head set Jack /Programming Cable Jack**
15. **Belt clip screw hole**
16. **Antenna**
17. **Battery cover**
18. **Open slot for battery cover**