

# Quick Start Guide

## Waterproof Pendant Activation & Clearing



### To Send an Alarm

Simply press the gray activation button and hold it for at least one second.



### The Pendant Will Vibrate

And you will see a series of red flashing lights that will blink rapidly at first and then will slow to a rate of once every three seconds until the alarm is cleared.

## Please Note

### After Sending an Alarm

The end user can send a subsequent alarm once ten seconds has elapsed, even if the initial alarm has not been cleared on the device.

## Clearing with Magnetic Alarm Clearance Card



### To Clear an Alarm

With the magnetic alarm clearance card.



### Place The Card

Over the gray activation button.



### A Series of Six Blue

Flashing lights will indicate a successful alarm clearance.

# Quick Start Guide

## Waterproof Pendant Activation & Clearing Continued

### Clearing with Press Button Pattern



#### To Clear an Alarm

With the button press pattern.



#### Press the Button

Three times quickly.



#### Look for Two Quick Blue

Flashing lights to indicate that you initiated the process.



#### Press the Button Quickly

Three more times.



#### A Series of Six Blue

Flashing lights will indicate a successful alarm clearance.



(800) 475-5852  
20809 Kensington Blvd, Lakeville, MN 55044  
[www.advancedwireless.com](http://www.advancedwireless.com)

