

Quick Start Guide

Waterproof Pendant Battery Replacement



When Battery is Low

The transmitter will send a low battery alert, and start a seven-day countdown



If Two Days Pass

Without the battery being changed. The yellow low battery LED on the bottom of the pendant will begin to blink, and will not stop until the battery is replaced, or the seven-day countdown expires.

Please Note

Seven-Day Countdown Expiration

If the seven-day countdown expires without the battery being changed, the pendant will automatically go into storage mode and will no longer function.



To Change the Battery

Use the alarm clearance card or a quarter to turn the battery door to the unlocked padlock icon.

Using any other tools to unlock the door may cause damage



Remove the Battery Door

And set to the side.



Remove the Old Battery

From the battery compartment. The old battery must be recycled at your local recycling center.

Quick Start Guide

Waterproof Pendant Battery Replacement Continued



Place the New Battery


In the battery compartment, ensuring that the positive terminal (+) faces up.

The waterproof pendant uses one standard CR2032 coin cell battery.



Set the Battery Door

Over the battery so that the arrow on the battery door is lined up with the unlocked padlock icon.

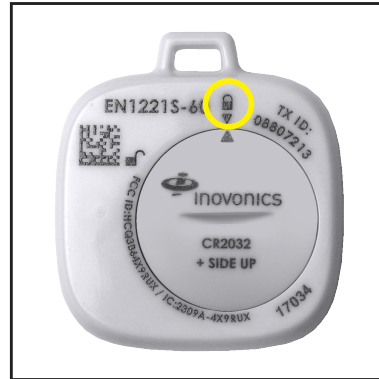

Secure the Battery Door

By using the alarm clearance card or a quarter to turn the battery door to line up the arrow on the battery door with the arrow under the locked padlock icon.



Activate Pendant

Press the Activation Button to initialize the transmitter.



Clear the Resulting Alarm

After waiting a minimum of 10 seconds with either the button press pattern or the alarm clearance card.

Please Note

If the Pendant is Not Activated

After replacing the battery, the low battery indication will not clear until the next check-in interval.